

# S.P.M. s.r.l.

Quartz Tube trolley with elevator

#### Quartz tube trolley






This trolley has been designed with the purpose of quartz tubes insertion into the cleaning equipment.

Main features of the trolley:

- Pivoting rollers for easy movement with manual brake for loading/unloading operations;
- Compact design for easy quartz tube insertion into the cleaning equipment;
- Manual UP/DW hydraulic system for quartz tubes smooth releasing/catching into cleaning equipment avoiding quartz tubes shocking and stress;
- Easy belt locking device: fast and secure quartz tube releasing and hold;
- Interchangeable quartz tube supports for different diameters (top and bottom) No tools needed;
- Easy Adjustable Top and bottom lifting end stroke

#### Quartz tube trolley



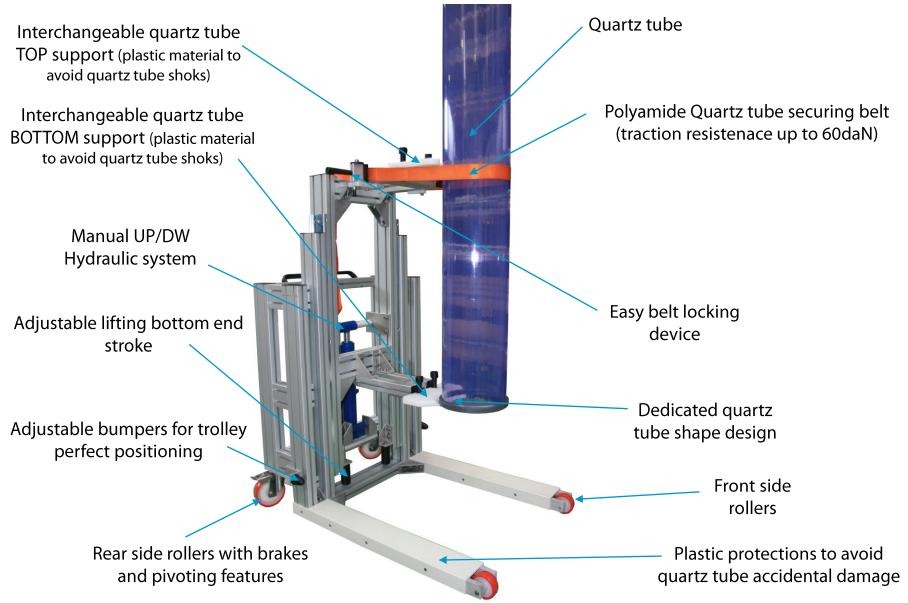

# Easy Belt locking device



Manual handle to release/lock the belt

Safety releasing handle lock

Belt gripper








### Lifting system




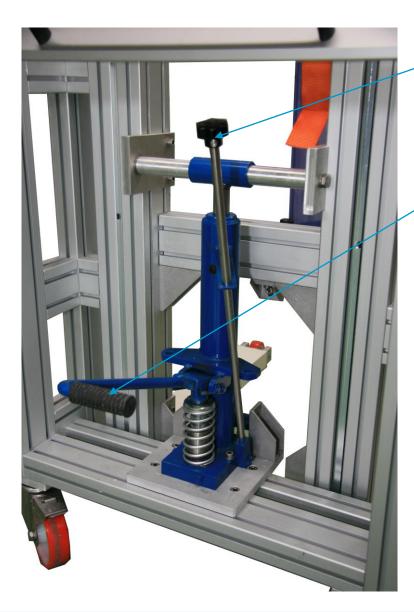

Manual handle for trolley lowering (smooth and slow movement to avoid quartz stress)


Manual pedal for trolley lifting (hydraulic system up to 500 kg)

Adjustable Lifting/Lowering height indication

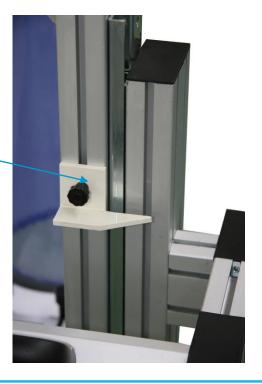


## Bottom quartz support




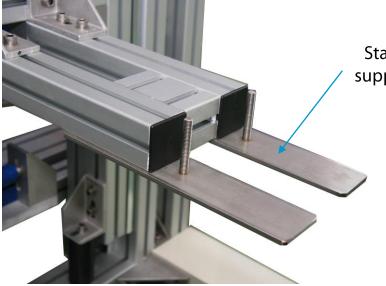

Stainless steel support holding plate

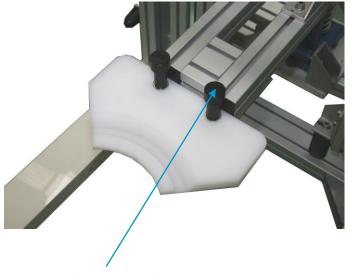

Plastic fasteners for support locking (no tools needed for support change operations)

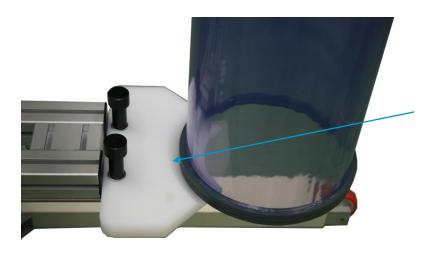

Dedicated quartz tube seat



S.P.M. s.r.l.

### **Ambrogio Sala**

President



- E-mail: ambsala@spm-semiconductor.it
- Web: <u>www.spm-semiconductor.it</u>
- Youtube channel:<a href="https://www.youtube.com/user/SPMSemiconductor">https://www.youtube.com/user/SPMSemiconductor</a>

- Phone: +39 0396010152

- Fax: +39 0396011434

Address: via G.Galilei 8, 20876 Ornago (MB) ITALY